

Gazebo with Mosquito Net

Pop-up garden tent with 4 mosquito net walls



Mesh walls tied to the legs as curtains

A pop-up garden tent with a powder-coated steel frame, a waterproof white roof and four white mosquito net walls. Each wall has a zip in the middle – you can open it as an entrance or tie both halves to the legs like curtains.

Sizes	3x3 m · 3x4.5 m · 3x6 m
Frame	steel scissor frame, powder coated
Roof	white polyester with PVC layer, waterproof, UV protection
Walls	4 mosquito net walls with zip
Fastening	5 cm wide Velcro

Package contents

- 1 steel frame with roof
- 4 mosquito net walls

Installation and use

- 1 Unpack**
Two persons: stand the folded frame upright on its feet at the final position.
- 2 Open the frame**
Each person holds one side and walks backwards until the frame is half open. Check that the roof sits correctly on the frame.
- 3 Lock the roof**
Push the frame fully open and push the sliders at the top of each leg up until they lock with a click.
- 4 Raise the legs**
Raise the legs one by one to the same height until the pin locks. Tension the roof fully so that no water can collect.
- 5 Anchor**
Anchor every leg with pegs or weights – also when only the mesh walls are installed.
- 6 Attach the mesh walls**
Press the top edge of each wall onto the Velcro inside the roof edge and fasten the sides to the legs. Open the zip to enter or tie both halves to the legs.

Note: To take the gazebo down, follow the steps in reverse order. Never fold the frame with the sliders locked.



Zip in the middle of each mesh wall

Safety instructions

For this product

- Always anchor the gazebo – in every weather. Take it down in strong wind, storm, heavy rain or snow.
- Remove accumulated water from the roof immediately and always keep the roof fully tensioned.
- Watch your fingers when opening and closing the scissor frame – risk of pinching. Wear gloves.
- Do not climb on the frame and do not hang heavy objects on it.
- Do not use open fire, grills or heaters inside or close to the gazebo.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Pack the roof and walls only when dry. Clean with water and mild soap.
- Keep the sliders and legs free of sand and dirt.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.